

P. 1 Guide — LAKER Sydney, AU.

LAKER


Assembly Guide —

A-joint Bench




Thank you for choosing Laker! Please confirm that all components shown in this guide are included. If anything is missing, let us know—it's rare, but it can happen. With proper care, your piece will last a lifetime. For any questions, contact us at info@laker.studio.

A-JOINT BENCH
Components

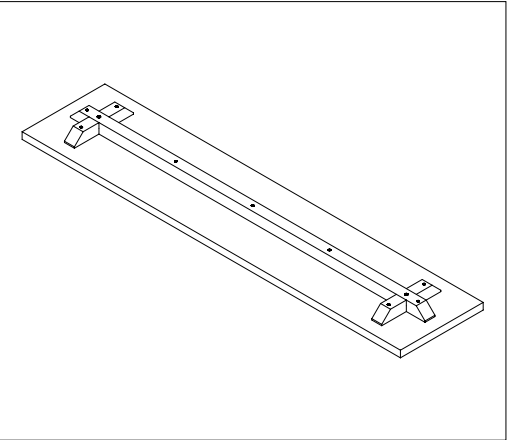


PART NAME
MATERIAL
DIMENSIONS

TIMBER SEAT
TIMBER
350W X 1600L X 70H

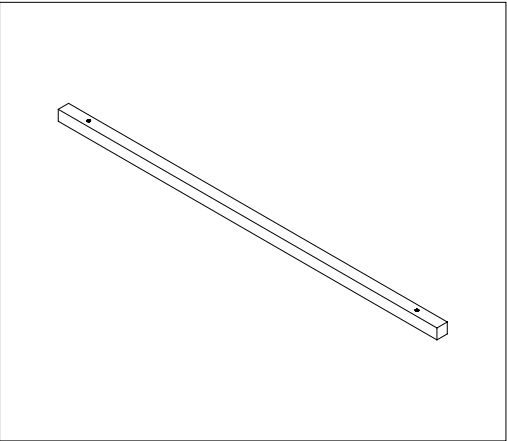


PART NAME
MATERIAL
DIMENSIONS

CROSS BEAM
TIMBER
40W X 1500L X 40H

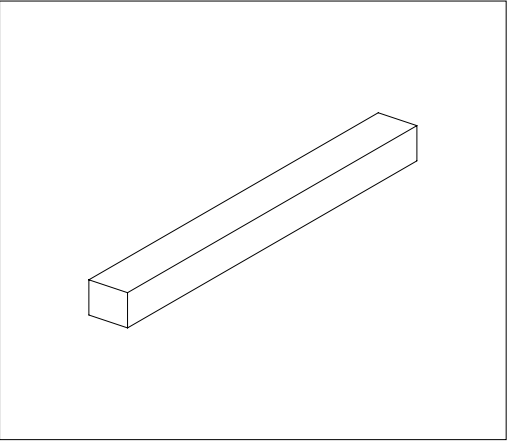


PART NAME
MATERIAL
DIMENSIONS

LEG (4)
TIMBER
40W X 400L X 40H

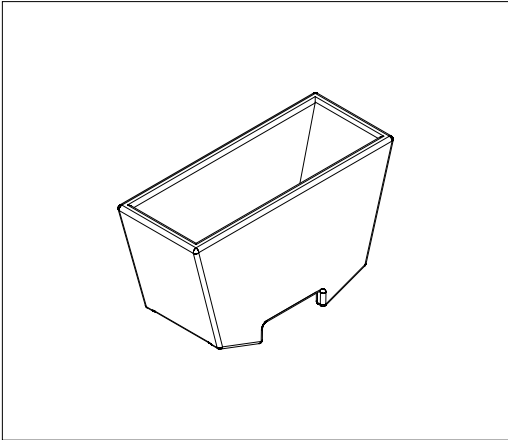


PART NAME
MATERIAL
DIMENSIONS

A-JOINT MINI BODY (2)
ALUMINIUM / BRONZE
145W X 58D X 84H

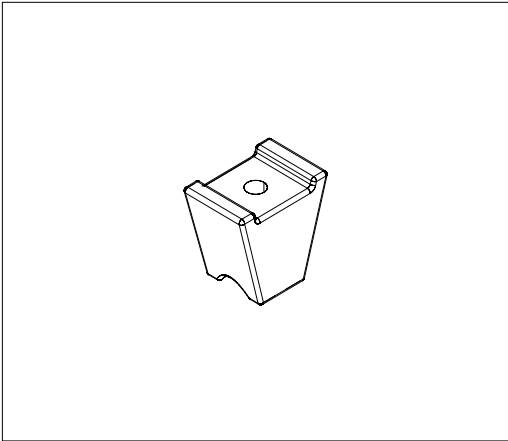

PART NAME
MATERIAL
DIMENSIONS


A-JOINT MINI WEDGE (2)
ALUMINIUM / BRONZE
63W X 43D X 60H

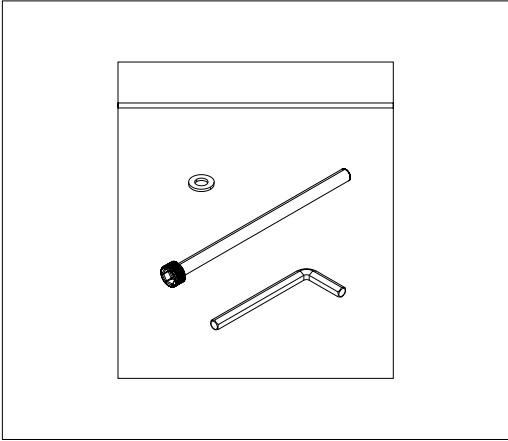

PART NAME
MATERIAL
DIMENSIONS


HARDWARE BAG
-
-

STEP 1

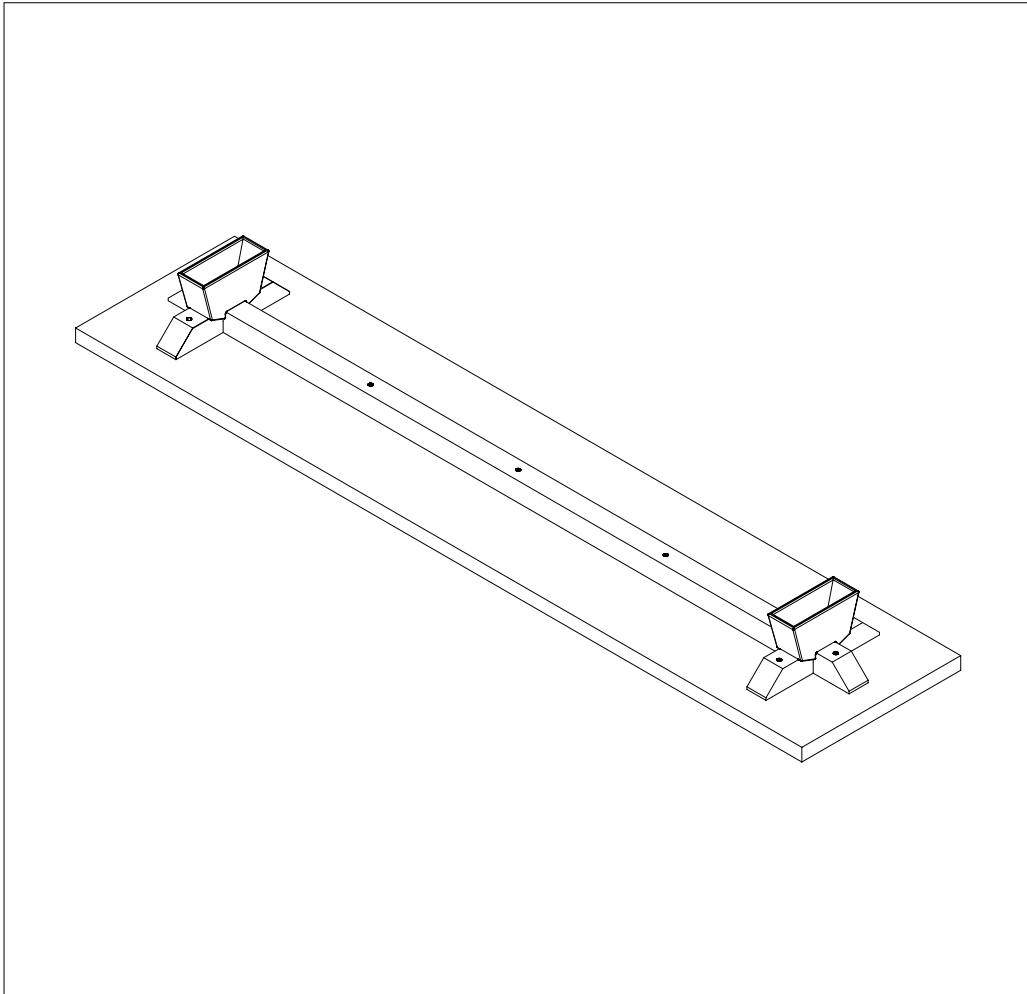

Lay the timber seat on the ground with the rails facing up. Place the A-joint Mini body on top of the rails as shown.


STEP 2

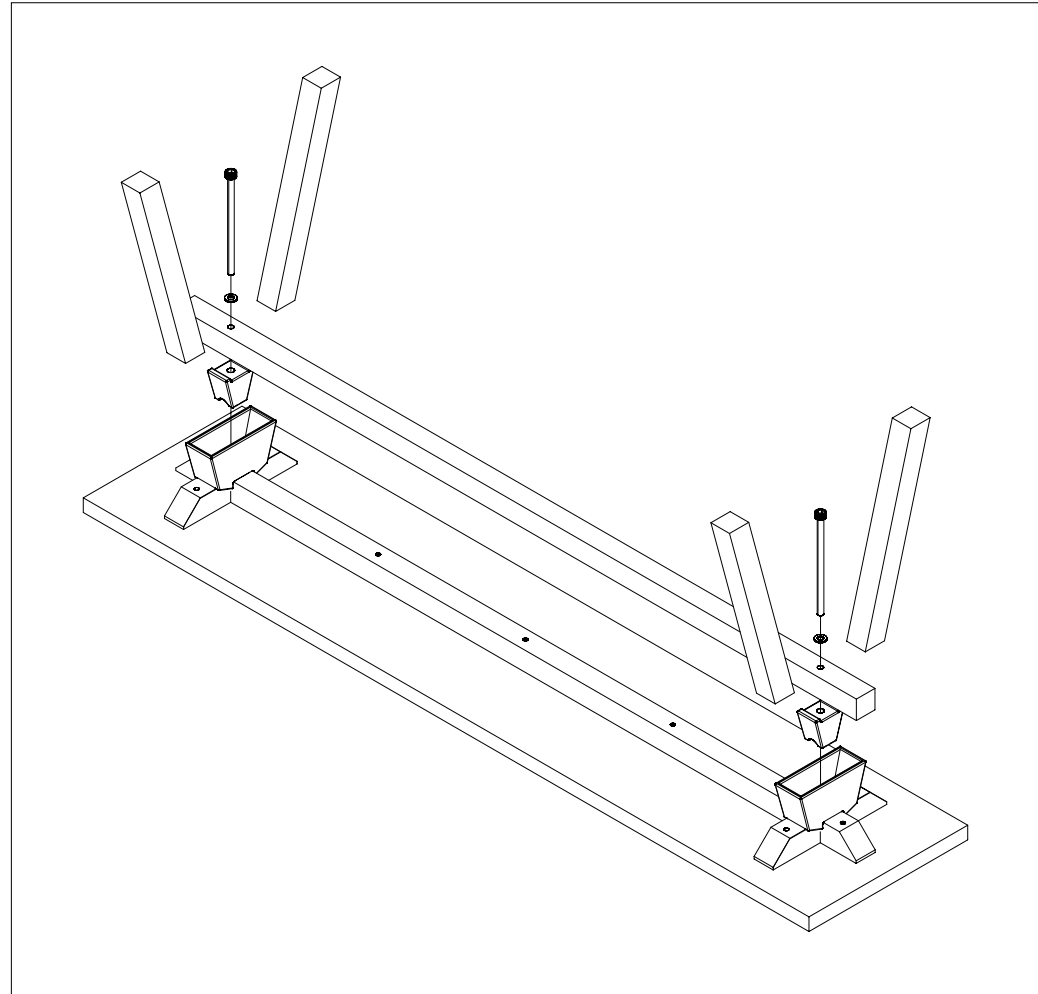

Insert the timber legs as shown and fix down with the A-joint Mini wedge using the provided bolt, washer and allen key with the cross rail inbetween as shown.

Be sure the screw the bolt in very tight to prevent any movement of the Joint or Legs.

STEP 3

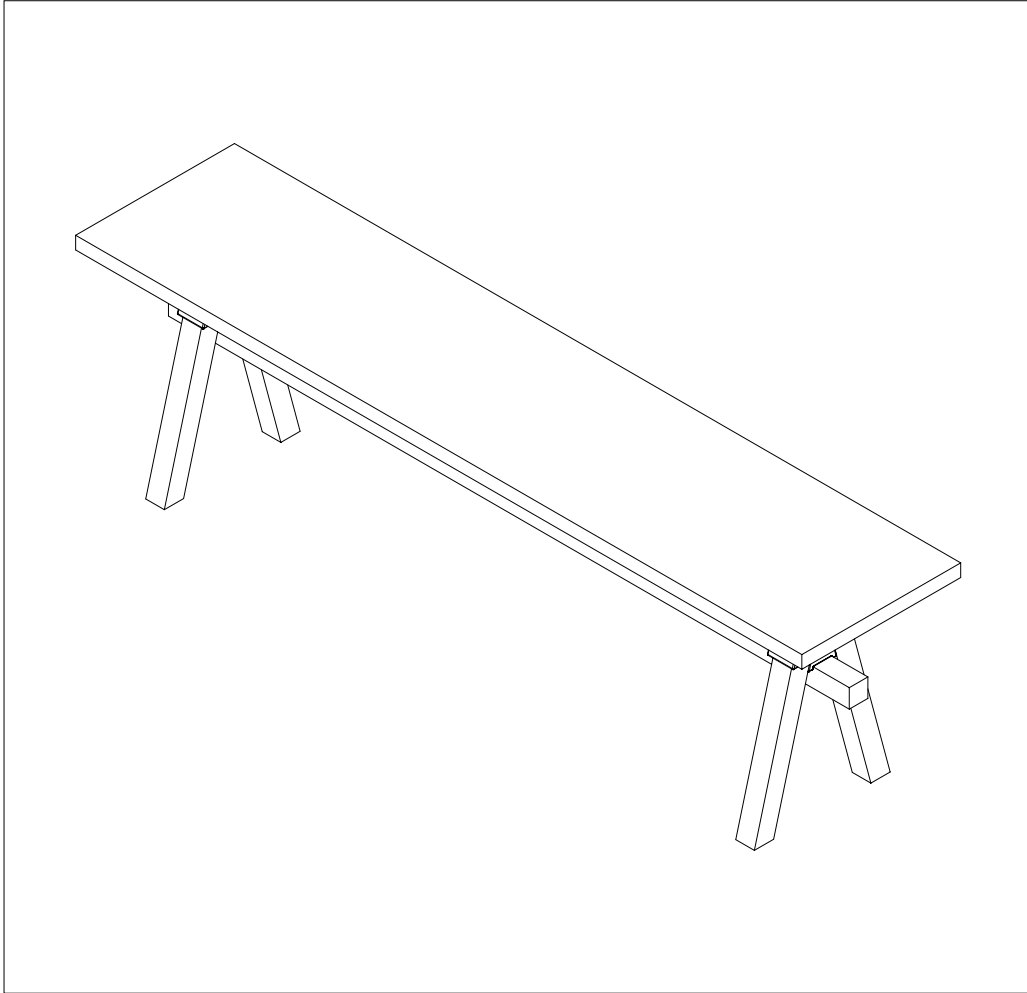

Turn over and enjoy your new A-joint
Bench!

CARE INSTRUCTIONS

To maintain cast metal surfaces, dust regularly with a soft, lint-free cloth. For deeper cleaning, use a damp cloth with mild soapy water, avoiding harsh chemicals and abrasive pads that can scratch or tarnish. A non-abrasive metal polish can be used occasionally to restore shine.

For timber, wipe with a soft, dry cloth to remove dust. Use a slightly damp cloth for cleaning, followed by immediate drying, and avoid abrasive or acidic cleaners. Protect from heat and moisture by using coasters and keeping out of direct sunlight to prevent fading.

Place felt pads under items to avoid scratches, and lift rather than drag any heavy objects to protect both surfaces. Following these steps will help keep your cast metal and timber finishes looking pristine.

RETURNS POLICY

Please note that the following terms apply to all returns: Our returns policy allows for exchanges, but not refunds. If you want to return a piece for exchange, you must do so within 30 days of purchase. To be eligible for exchange, your item must be returned to Laker unused, in the same condition in which you received it, and in the original packaging. We also require a receipt as proof of purchase. To return your product, please send it by post or courier to: 3/82 Myrtle street, Chippendale NSW 2008. Please note that customers are responsible for return shipping costs, and that these costs are non-refundable.

Replacements are offered only if your purchased item is defective or damaged when it arrives. Should this happen, please return the item to us at the address above; please also send an email advising us of the problem.

The time it takes for an exchange or replacement item to reach you will depend on your location, but we will make every attempt to get it to you promptly. If you are returning an item priced at more than \$75, we strongly recommend that you use a trackable shipping service or purchase transit insurance, as we cannot guarantee that we will receive your returned item.

(E. info@laker.studio)
(P. (02) 9199 9658)
(A. 3/82 Myrtle Street, Chippendale NSW 2008)